



## RCU Information



### Programing The Remote Control

#### Using Direct Entry Method

1. Turn on the component you want to control (TV, VCR or DVD)
2. Locate the enclosed Code List. Find your brand of the component you want to control.
3. Press and hold the component key you want (TV, VCR or DVD) to program.  
Holding the component key until the LED on the remote control turns on, then release the key.
4. Enter 3-digit code from the code list, then the LED blinks three times.
5. If you get no response, repeat these steps using the next code listed for your brand until the component responds to the remote control command.

#### Changing Volume Lock

Locking the volume controls to a single device makes it easier to control volume, without having to guess whether the volume will change. If you lock the remote's volume controls to the TV, you will always be able to change the volume to the level you want, without having to adjust it on multiple devices.

If you want to lock the volume for the STB component:

1. Press and hold the STB component key until the LED on the remote control turns on.
2. Enter 3-digit code, 9 9 9 .
3. Press and release the STB component key, then the LED blinks three times.

Unlocking volume control:

If you want to unlock the volume for the STB component:

1. Press and hold the STB component key until the LED on the remote control turns on.
2. Enter 3-digit code, 9 9 9 .
3. Press and release the STB component key, then the LED blinks three times.

#### TV-Brand (Maker) CODE NO\*

|           |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| SAMSUNG   | 000 | 002 | 005 | 008 | 016 | 017 | 018 | 051 | 086 | 095 | 096 | 097 | 130 | 139 | 151 | 163 |
| LG        | 017 | 051 | 063 | 125 | 130 | 204 | 245 | 272 |     |     |     |     |     |     |     |     |
| SONY      | 014 | 150 | 157 | 159 | 164 | 170 | 177 | 292 | 343 | 350 |     |     |     |     |     |     |
| PHILIPS   | 000 | 002 | 005 | 010 | 012 | 015 | 016 | 043 | 044 | 046 | 049 | 051 | 065 | 070 | 077 | 078 |
| PANASONIC | 015 | 061 | 066 | 138 | 152 | 175 | 189 | 199 | 246 | 290 | 294 | 311 |     |     |     |     |
| TOSHIBA   | 040 | 041 | 042 | 058 | 075 | 082 | 083 | 086 | 096 | 130 | 138 | 145 | 146 | 155 | 156 | 183 |
| SHARP     | 000 | 005 | 016 | 018 | 023 | 026 | 033 | 051 | 075 | 080 | 088 | 089 | 113 | 131 | 139 | 230 |
| DAEWOO    | 000 | 001 | 009 | 016 | 017 | 018 | 030 | 051 | 116 | 139 | 151 | 167 | 201 | 204 | 247 | 248 |
| HITACHI   | 000 | 005 | 006 | 007 | 016 | 018 | 051 | 067 | 068 | 069 | 100 | 101 | 102 | 103 | 104 | 105 |
| SANYO     | 016 | 042 | 051 | 053 | 057 | 058 | 085 | 098 | 130 | 137 | 144 | 236 | 250 | 275 |     |     |