

# EDISION®

*More features - Better prices!*



REMOTE CONTROL EDISION OS 4:1 UNIVERSAL

**TV - VCR - DVD / CODE LIST**



## RCU Information



### Programing The Remote Control

#### Using Direct Entry Method

1. Turn on the component you want to control (TV, VCR or DVD)
2. Locate the enclosed Code List. Find your brand of the component you want to control.
3. Press and hold the component key you want (TV, VCR or DVD) to program.  
Holding the component key until the LED on the remote control turns on, then release the key.
4. Enter 3-digit code from the code list, then the LED blinks three times.
5. If you get no response, repeat these steps using the next code listed for your brand until the component responds to the remote control command.

#### Changing Volume Lock

Locking the volume controls to a single device makes it easier to control volume, without having to guess whether the volume will change. If you lock the remote's volume controls to the TV, you will always be able to change the volume to the level you want, without having to adjust it on multiple devices.

If you want to lock the volume for the STB component:

1. Press and hold the STB component key until the LED on the remote control turns on.
2. Enter 3-digit code, 9 9 9 .
3. Press and release the STB component key, then the LED blinks three times.

Unlocking volume control:

If you want to unlock the volume for the STB component:

1. Press and hold the STB component key until the LED on the remote control turns on.
2. Enter 3-digit code, 9 9 9 .
3. Press and release the STB component key, then the LED blinks three times.

#### TV-Brand (Maker) CODE NO\*

SAMSUNG	000	002	005	008	016	017	018	051	086	095	096	097	130	139	151	163
LG	017	051	063	125	130	204	245	272								
SONY	014	150	157	159	164	170	177	292	343	350						
PHILIPS	000	002	005	010	012	015	016	043	044	046	049	051	065	070	077	078
PANASONIC	015	061	066	138	152	175	189	199	246	290	294	311				
TOSHIBA	040	041	042	058	075	082	083	086	096	130	138	145	146	155	156	183
SHARP	000	005	016	018	023	026	033	051	075	080	088	089	113	131	139	230
DAEWOO	000	001	009	016	017	018	030	051	116	139	151	167	201	204	247	248
HITACHI	000	005	006	007	016	018	051	067	068	069	100	101	102	103	104	105
SANYO	016	042	051	053	057	058	085	098	130	137	144	236	250	275		

# TV - CODE LIST

Brand (Maker)	CODE NO								
A MARK	000								
ABEX	130 212								
ADMIRAL	013 131 166 230 268								
ADPECT	124								
ADVENT	308								
ADVENTURA	195								
AIKO	009 248								
AIWA	213 228 245 265								
AKAI	014 198 292 341								
ALLERON	056 282								
AMARK	268								
AMTRON	030								
ANAM NATIONAL	015 030 205 311 322								
AOC	016 017 018 019 051 140 141 169								
	187 204								
APEX	181 215 229 291								
ARCHER	268								
AUDIOVOX	030								
AXION	241 344								
BELCOR	016 051								
BELL & HOWELL	013 042 058 166 266 347								
BENQ	283 284 315								
BRADFORD	030								
BROKSONIC	016 032 168 182 200 278 309 344								
BROKWOOD	016 051								
CANDLE	016 044 051 195								
CAPEHART	140								
CARVER	012								
CELEBRITY	014 292								
CELERA	181								
CENTRIOS	262								
CENTURION	051								
CETRONIC	030								
CHANGHONG	181 291								
CITIZEN	009 010 016 018 030 042 044 051								
	086 096 139 166 168 173 210 248								
	264								
CLAIRTONE	187								
CLASSIC	030 181 291								
CLP	190								
CLP CLASSIC	051 188 196								
COLOR VOICE	267								
COLORTYME	011 016 018 051 267								
CONCERTO	016 051								
CONCIERGE	125								
CONTEC	130 187								
CONTEC/CONY	005 006 007 030								
CORNEA	051								
CORONADO	000								
CRAIG	030								
CROSLEY	012 294								
CROWN	030								

# TV - CODE LIST

Brand (Maker)	CODE NO							
CTX	268							
CURTIS MATHES	008	012	016	018	042	045	051	058
	086	096	139	166	172	173	210	255
	266	346	347					
CXC	030							
DAEWOO	000	001	009	016	017	018	030	051
	116	139	151	167	201	204	247	248
	251	257	258	267	272	312	340	341
	344	346						
DAYTRON	016	018	051	139				
DELL	300	345						
DIAMOND VISION	256	277	297					
DIGISTAR	211	224	240	328	345			
DIMENSIA	045	266	347					
DISNEY	252							
DUKANE	124	295						
DUMONT	016	051	125					
DURABRAND	121	168	198	239	244	264	344	
DYNASTY	030							
DYNATECH	016							
ELECTROBAND	014	187	292					
ELECTROHOME	002	003	014	015	016	018	051	198
	311							
ELEKTRA	166							
ELITE VIDEO	242							
EMERSON	000	004	005	016	018	020	021	022
	023	024	025	026	027	028	029	030
	031	032	033	034	035	036	037	038
	039	042	051	056	058	114	139	142
	143	167	168	178	188	198	205	206
	207	216	231	233	245	258	263	264
	269	270	278	280	281	282	325	344
	346							
ENVISION	016	018	051	191				
FISHER	042	057	058	059	130	144	275	
FUJITSU	056	242	282					
FUNAI	030	056	231	245	264	282		
FUTURETEC	030							
GATEWAY	220							
GE	003	008	015	016	018	045	051	060
	061	062	078	132	147	148	149	174
	188	189	235	237	266	293	307	311
	337	347						
GIBRALTER	016	051	125					
GOLDSTAR	000	002	005	016	017	018	051	055
	064	120	125	127	130	139	204	245
	272							
GPX	203							
GRUNDY	030	056	282					
GUESTVISION	349							
HAIER	229	239	244	283				
HALLMARK	016	018	051					

# TV - CODE LIST

Brand (Maker)	CODE NO							
HARSPER	184	185						
HARVARD	030							
HISENSE	229	303	314					
HITACHI	000	005	006	007	016	018	051	067
	068	069	100	101	102	103	104	105
	106	107	108	109	119	123	124	130
	143	161	166	171	179	245	261	263
	271	285	295					
ILO	254	334	353	354				
IMA	030							
INFINITY	012	294	335					
INITIAL	353							
INSIGNIA	168	224	231	240	244	264	317	319
INTEGRA	287							
INTEQ	125							
JANEIL	195							
JBL	012	294						
JC PENNEY	003	006	008	010	016	017	018	041
	044	045	051	055	060	061	064	078
	086	095	096	117	130	132	139	189
	204	210	235	237	266	269	293	347
JCB	292							
JENSEN	016	018	051	319				
JVC	005	006	007	046	047	048	061	068
	128	129	130	133	158	178	218	242
	271	285	342					
KAWASHO	014	016	018	051	292			
KAYPANI	140							
KEC	000	030						
KENWOOD	002	016	018	051				
KLH	181							
KLOSS NOVABEAM	030	049	065	195				
KMC	000							
KONKA	030	217	222	234	279	317	352	
KTV	030	066	139	142	187	280		
KURAZAI	166							
LASONIC	256	277						
LG	017	051	063	125	130	204	245	272
LIQUIDVIDEO	241	253	344					
LODGENET	166	266	305	347				
LOEWE	289	294						
LOGIK	013	166	266	347				
LUCE	208							
LUXMAN	016	018	051					
LXI	008	012	018	040	041	042	045	051
	058	086	132	237	245	266	294	347
MAGNASONIC	282							
MAGNAVOX	000	002	010	012	016	018	043	044
	046	049	050	051	065	079	110	111
	112	230	231	285	294	335	349	
MAJESTIC	013	166	266	347				
MARANTZ	012	016	018	051	067	287	294	





# TV - CODE LIST

Brand (Maker)	CODE NO							
POLAROID	303	319	321					
PORTLAND	000	009	016	017	018	051	139	204
	248	251	346					
PRECISION	226							
PRICE CLUB	096	210						
PRIMA	211	224	240	328				
PRINCETON GRAPHICS	260	268						
PRISM	061	189						
PROSCAN	008	045	132	237	266	301	336	347
PROTON	005	016	018	051	073	140	227	304
	316							
PROVIEW	354							
PULSAR	016	051	125					
QUASAR	015	061	066	074	138	175	189	199
	290	294	311					
RADIO SHACK	042	051	058	138	245	266	281	307
	337	347						
RADIO SHACK / REALISTIC	005	016	018	030	042	045	058	075
	130	139						
RCA	002	008	015	016	017	018	019	045
	051	090	091	092	093	094	099	118
	132	135	136	143	148	153	162	167
	172	176	180	189	192	204	237	263
	266	288	301	307	311	336	337	347
	351							
REALISTIC	042	051	058	138	245	266	281	337
	347							
RHAPSODY	187							
RUNCO	125	287						
SAMPO	016	018	051	130	139	140	186	194
	220							
SAMSUNG	000	002	005	008	016	017	018	051
	086	095	096	097	130	139	151	163
	204	209	210	223	232	255	272	302
	310	339	341					
SAMSUX	051							
SAMTRON	210							
SANSUI	168	200	278					
SANTECA	197							
SANYO	016	042	051	053	057	058	085	098
	130	137	144	236	250	275		
SCOTCH	051							
SCOTT	005	016	018	020	021	030	032	051
	056	206	282					
SEARS	000	002	006	007	008	012	016	018
	040	041	042	045	047	051	056	057
	058	059	086	087	130	132	144	160
	200	210	231	237	259	264	266	275
	282	294	298	347				
SELECTRON	330	331	332					
SHARP	000	005	016	018	023	026	033	051
	075	080	088	089	113	131	139	230

# TV - CODE LIST

Brand (Maker)	CODE NO								
	259	268	299	313	318				
SHOGUN	016	051							
SIGNATURE	004	013	166	266	347				
SIMPSON	044								
SONIC	187								
SONY	014	150	157	159	164	170	177	292	
	343	350							
SOUNDESIGN	010	016	018	030	044	051	056	282	
SPECTRAVISION	323								
SQUAREVIEW	264								
SSS	016	030	051						
STARLITE	030								
STARSIGHT	190								
SUPERSCAN	231	259	298						
SUPERSONIC	203								
SUPRA	051	296							
SUPREMACY	195								
SUPREME	292								
SVA	229								
SYLVANIA	002	010	012	016	018	043	044	046	
	049	050	051	065	079	081	146	168	
	231	245	264	285	294	348	349		
SYMPHONIC	020	030	056	160	231	245	264		
SYNTAX	051								
TANDY	131	268							
TASHIKO	041								
TATUNG	015	254	283	311					
TECHNICS	061	189							
TECHWOOD	016	018	051	061	189				
TEKNIKA	000	005	006	007	009	010	012	013	
	016	017	018	030	044	051	056	086	
	096	130	138	139	166	175	195	204	
	210	248	266	282	347				
TELECATION	082	238							
TELERENT	166	266	347						
TERA	016	051	227						
TEVION	254								
THOMSON	154								
TMK	016	051							
TOSHIBA	040	041	042	058	075	082	083	086	
	096	130	138	145	146	155	156	183	
	200	202	210	238	255	274	285	287	
TOTEVISION	139								
TRUTCH	329								
UNIVERSAL	060	078	235	293					
VICTOR	271								
VIDIKRON	012								
VIDTECH	016	051	204						
VIEWSONIC	220	295							
VIKING	195								
VIZIO	283								
WARDS	000	002	012	013	016	017	018	020	



# TV - CODE LIST

Brand (Maker)	CODE NO							
	021	043	044	045	046	049	051	056
	060	065	075	078	079	084	166	204
	235	266	282	293	294	347		
WESTINGHOUSE	193	320						
WHITE WESTINGHOUSE	225	245	251	272	346			
YAMAHA	002	016	017	018	051	138	204	
ZENITH	004	013	016	033	051	121	122	124
	125	126	140	165	166	168	190	230
	245	248	251	255	258	278	335	342
	344							

# VCR - CODE LIST

Brand (Maker)	CODE NO							
AIWA	049							
AKAI	061	063						
AMPRO	044							
ANAM	025	026	027	028				
AUDIO DYNAMICS	000							
CANON	028							
CAPEHART	018							
CRAIG	006	064						
CURTIS MATHES	008	009	028					
DAEWOO	010	013	016	017	018	019	020	021
	022	023	024	026	033	075	077	
DAYTRON	018							
DBX	000							
DYNATECH	053							
ELECTROHOME	043							
EMERSON	003	008	009	010	028	041	062	065
	066	067	068					
FISHER	075							
GE	008	009	028	044				
HARMAN KARDON	000	047	069					
HITACHI	001	002	045	046	047	048		
INSTANTREPLAY	028							
JCL	028							
JCPENNY	000	006	028	045	054			
JVC	000	028	055	070	078			
KENWOOD	048	055	055					
LG ( GOLD STAR )	000	001	002	003	004	045		
LXI	001	003	010	045				
MAGIN	006							
MAGNAVOX	008	009	028	057	068	072		
MARANTZ	000	028	057	073	076			
MARTA	003							
MEI	028							
MEMOREX	003	006	028	044	053	075		
MGA	043	047	069					
MINOLTA	001	002	045					
MITSUBISHI	002	043	045	047	050	051	052	053
MTC	006							
NEC	000	054	055					
OPTONICA	053							
PANASONIC	027	028	056					
PENNEY	000	001	054					
PENTAX	001	002	028	045				
PHILCO	028	057						
PHILIPS	003	028	057	058	059			
PILOT	003							
PIONEER	045	055	060					
PORTLAND	018							

# VCR - CODE LIST

Brand (Maker)	CODE NO								
PULSAR	044								
QUASAR	028	074							
RCA	001	002	006	008	009	028	045	071	
REALISTIC	003	006	028	053	075				
RICO	035								
RUNCO	044								
SAMSUNG	005	006	007	008	009	010	011	012	
	013	014	015	032	041	061			
SANSUI	055		064						
SANYO	006	017	075						
SCOTT	010	013	041						
SEARS	001	002	003	010	028	042	045	075	
SHARP	028								
SONY	028	030	031	032	033	034	035	036	
	037	038	039	040					
STS	001	045							
SYLVANIA	028	043	057						
TAEKWANG	029								
TANDY	075								
TECHNICS	027	028							
TEKNIKA	003	028							
TMK	062								
TOSHIBA	010	013	041	042	043	045	048		
TOTEVISION	003	006							
UNITECH	006								
VECTOR RESEARCH	000	054							
VICTOR	055								
VIDEO CONCEPTS	000	054							
VIDEOSONIC	006								
WARDS	001	006	008	009	010	028	041	045	
	053								
YAMAHA	000								
ZENITH	003	030	033	035	044	055			

# DVD - CODE LIST

Brand (Maker)	CODE NO						
AFREY	068						
AIWA	000	019					
AKAI	117	119					
ALLEGRO	099	100					
ALPINE	001						
AMES	023						
AMW	139						
APEX	004	006	008	009	084	105	
	125						
BLAUPUNKT	003	041	084				
BODYSONIC	068						
BOSE	093						
BROKSONIC	007	101	104	144			
CINEVISION	030						
CLARION	022						
CLASSIC	023						
COBY	006	108	130	131	142		
CONCEPT	084						
CRITERION	150						
CYBERHOME	115						
CYTRON	035	147					
DAEWOO	010						
DENON	005	011	036	037			
DENZEL	148						
DIAMOND VISION	128						
DIGITREX	006						
DIGIX	110						
DISNEY	034						
DUAL	035	103	133	138	148		
DURABRAND	030	035					
DVD 2000	015						
ELTA	106	119					
EMERSON	030	034	038	039	126		
ESA	133						
FISHER	020	040					
FUNAI	034	039	126				
GE	002	041	048	084			
GO VIDEO	018	023	094	097	100	107	
	141						
GOLDSTAR	030						
GPX	049	111	132				
GRADIENTE	056						
GREENHILL	084						
HAIER	121						
HARMAN KARDON	136						
HITACHI	018	042	043	050	051	148	
HITEKER	006						
ILO	084						

# DVD - CODE LIST

Brand (Maker)	CODE NO					
INFINITY	068					
INITIAL	084					
INSIGNIA	030	084	126			
INTEGRA	052					
JBL	136					
JVC	014	029	032	095	113	
JWIN	120					
KAWASAKI	122					
KENWOOD	033	036				
KISS	148					
KLH	084	129				
KONKA	024	017				
KOSS	056	147				
KXD	108					
LENOXX	119					
LG	030					
MAGNAVOX	013	026	034	126		
MARANTZ	013	030				
MEDION	035	128				
MEMOREX	035					
MERIDIAN	013					
MICROSOFT	002					
MINTEK	044	084				
MITSUBISHI	015					
MUSTEK	023					
MYRON & DAVIS	010					
NAD	030	038	086			
NAKAMICHI	045					
NESA	010	084				
NEXXTECH	010	110	112	133		
NORCENT	046	047	131	140		
ONKYO	052	123				
ORION	104					
ORITRON	056	081				
PACIFIC	035					
PANASONIC	025	036	053	054	055	059
	060	061	114	127	135	137
PHILIPS	013	026	031	034	056	126
PHILIPS-MAGNAVOX	013					
PIONEER	016	057	058	077	078	134
	145					
POLAROID	116	143				
POLK AUDIO	013					
PROLINE	056					
PROSCAN	002	079				
PROSONIC	131					
PYLE	080					
QWESTAR	080	081				
RCA	002	003	067	084	092	096



# DVD - CODE LIST

Brand (Maker)	CODE NO						
ROTEL	014						
SAMPO	068						
SAMSUNG	018	069	070	071	097	107	
SANSUI	072	104	144				
SANYO	020	073	098				
SEARS	104	126					
SEG	148						
SHARP	074	075					
SHERWOOD	076	118					
SHINCO	084						
SHINSONIC	084						
SONIC BLUE	141						
SONY	012	021	027	062	063	064	
	065	066	124	146	147		
SOUNDSTORM	080						
SUPERSCAN	126						
SUPERSONIC	111						
SV2000	126						
SYLVANIA	034	039	126				
SYMPHONIC	034	126					
TEAC	084						
TECHNICS	036	085					
TECHWOOD	086						
TEVION	035	138	147	150			
TOSHIBA	013	028	087	088	089	102	
	104	109					
WHARFEDALE	068						
WHITE WESTINGHOUSE	034						
X-BOX	002						
XENIUS	147						
YAMAHA	036	082	090	091			
YAMAKAWA	046	148	149				
ZENITH	030	083	099				