 


Congratulations on purchasing an EDISION piccollino S2

Please note that this information is valid at the time of publication.

Current information and detailed user manuals can be found on the Internet at: www.edision.gr

1 Unpacking

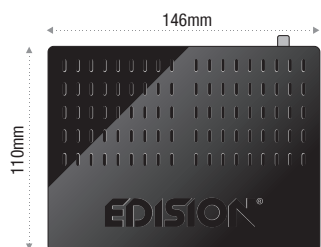

Remote control with 2 AAA batteries



Documentation



Service note

Please contact your EDISION specialist dealer for any further support and service.

Receiver piccollino S2

Notes: The front is factory fitted with a protective foil which can be removed easily and with caution. (Protective foil only for devices with display)

The scope of delivery may also include parts not listed here

 
Front Panel

- ① POWER button: Activates/Deactivates the device
- ② CH- / CH+ buttons: for moving in the program lists
- ③ Infrared sensor for the reception of remote control commands
- ④ Display LED, displays current information
- ⑤ Card reader



Back Panel

- ⑥ LNB IN: Connection for the coaxial cable to the signal from the satellite system
- ⑦ S/PDIF: Audio interface for amplifier/audio console
- ⑧ ETHERNET: Ethernet port RJ45 10/100 Mbps
- ⑨ HD OUT: Connection to an HDTV quality TV
- ⑩ SCART: For connecting to a TV set, using SCART cable [not for HD TV]
- ⑪ Connection for an adapter (DC 12V/1,0A)

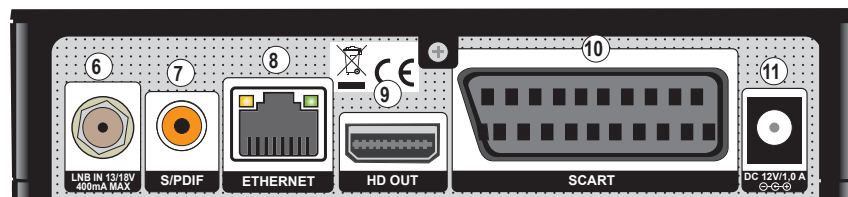

Subpages

 
- ⑫ / 2 x USB: Connection for USB storage devices
- ⑬ RS 232: For connecting to a PC, for receiver software update.
- ⑭ IR IN: Infrared connection port



2 Connecting and switching on

Note: For interference-free satellite TV reception, a specialist technician must calibrate your satellite TV system with a digital TV level meter

- Connect the receiver using **HDMI cable** via the HD OUT output port to your TV's HD OUT input port
- Now connect the receiver to the satellite antenna cable via the **LNB IN** input.
- Insert the batteries into the remote control. Notes on the remote control can be found on the back of these instructions.
- Connect the receiver to the power supply.
- The receiver starts with the BOOT process and is operational within a short time

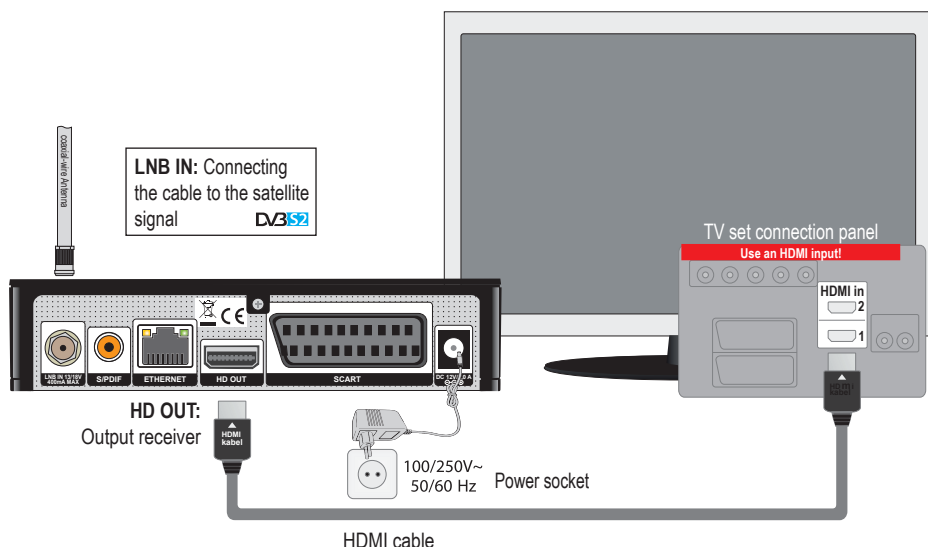


3 Remote control

Notes: Many of the listed buttons have multiple functions, which, are displayed in the menus. Some buttons and functions are optional. Important functions and buttons are briefly explained below. The buttons to be used are marked in red in the diagrams.


You are watching a channel, but now want to switch to another channel
» **How to switch between channels**



 Option 1
Use the up-down arrow buttons while watching television to select another channel.

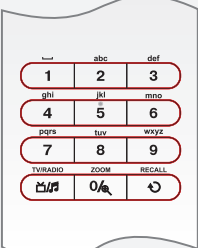


Option 2
Enter, via the number buttons, the number of the channel that you want displayed. Enter the number 0 via the ZOOM button.

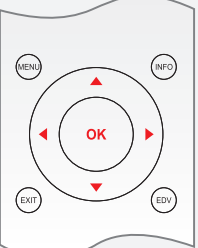 


Option 3
Call up the channel list via the OK button. Use the arrow buttons to navigate to the channel you want to select. Press the OK button to select the channel.

 You are watching a TV program or listening to a radio program and now want to change the volume » **How to change the volume on the receiver**

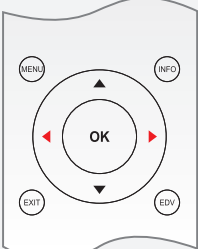

Option 1
In TV or Radio mode, press the right arrow key to increase the volume. Press the left arrow key to decrease the volume.

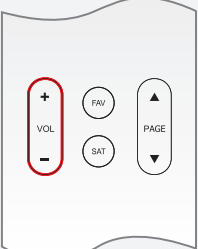 


Option 2
In TV or the radio mode, press the symbol «plus» key VOL to increase the volume. Reduce the volume by pressing the icon «minus» key VOL.



Option 3
Press the MUTE button in TV or Radio mode to switch off the sound completely. Repeated pressing of the MUTE button switches the sound back on.

» **How to use the main menu**

 
The channel list displays all the installed channels
» **How to use the channel list**

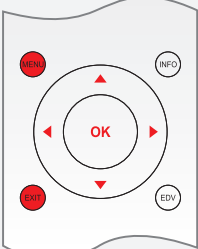


Press the MENU button to call up the main menu. Use the arrow buttons to navigate between the menu items and the OK button for selecting. Press the EXIT button to exit the menu structure.



 Press the OK button in TV or Radio mode to call up the channel list. Use the arrow buttons and OK button to navigate the menu. The EXIT button closes the list.

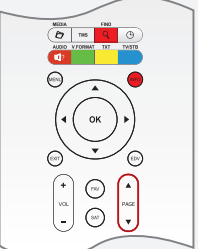


 Use the Page button in the right column of the menu to scroll page by page through the channel lists. The INFO button displays information about a channel. The FIND button searches for channels.

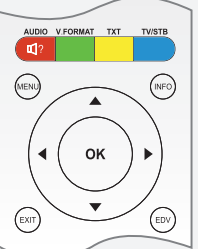

 Depending on which column of the menu of the channel list you are, you can call up other functions and menus with the coloured buttons. These possible functions are displayed in the lower section.

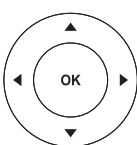

-  On/Off button.
-  Mute On/Off.
-  Starts recording manually.
-  Start playing the TimeShift function and / or a Recording.
-  Back to normal recording speed.
-  Finishes TimeShift, a recording or a playback.
-  Pauses playback.
-  Scrolls listings per page backward. Fast Possibility backwards.
-  Scrolls listings per page forward. Fast-forward capability.
-  Returns to the start, alternatively to the previous recording..
-  Switches to the end, alternatively to the next recording.
-  Displays a file list..
-  Show bar TimeShift.
-  Displays a file-list.
-  Allows you to set the time at which the Receiver autom. switches to standby mode.
-  Calls up the Audio menu.
-  Changes the display TV standard.
-  Calls up the Subtitle/Teletext menu.
-  Switching between TV and Receiver
-  Displays the main menu.
-  Displays the information bar.
-  With the arrow keys you can scroll in the lists up and down, left and right or regulate the volume. With the OK-key you confirm your menu-entry or activate the channel-list.
-  Exits a Menu/Dialogue window
-  Selection of the electronic program guide EDIVISION.
-  Scrolls up (+) or down (-) change the volume.
-  Scrolls up (+) or down (-) in lists of channel lists.
-  Displays the favourite lists.
-  Displays the satellite lists (optional).
-  Selection of TV/Radio program. Input of numbers or letters in the menus.
-  Toggles between TV and Radio mode.
-  Entering the number 0 / enlarges the image..
-  Returns to the previous program.

Insert/replace batteries in(to) the remote control

When inserting the batteries (2XAAA), observe the correct polarity. When the remote control is not in use for a long period of time, please remove the batteries to avoid possible damage to the remote control. If the batteries are dead, dispose of them properly and in an environmentally friendly manner, and not with household waste.

